 









KIAMA DRESSER

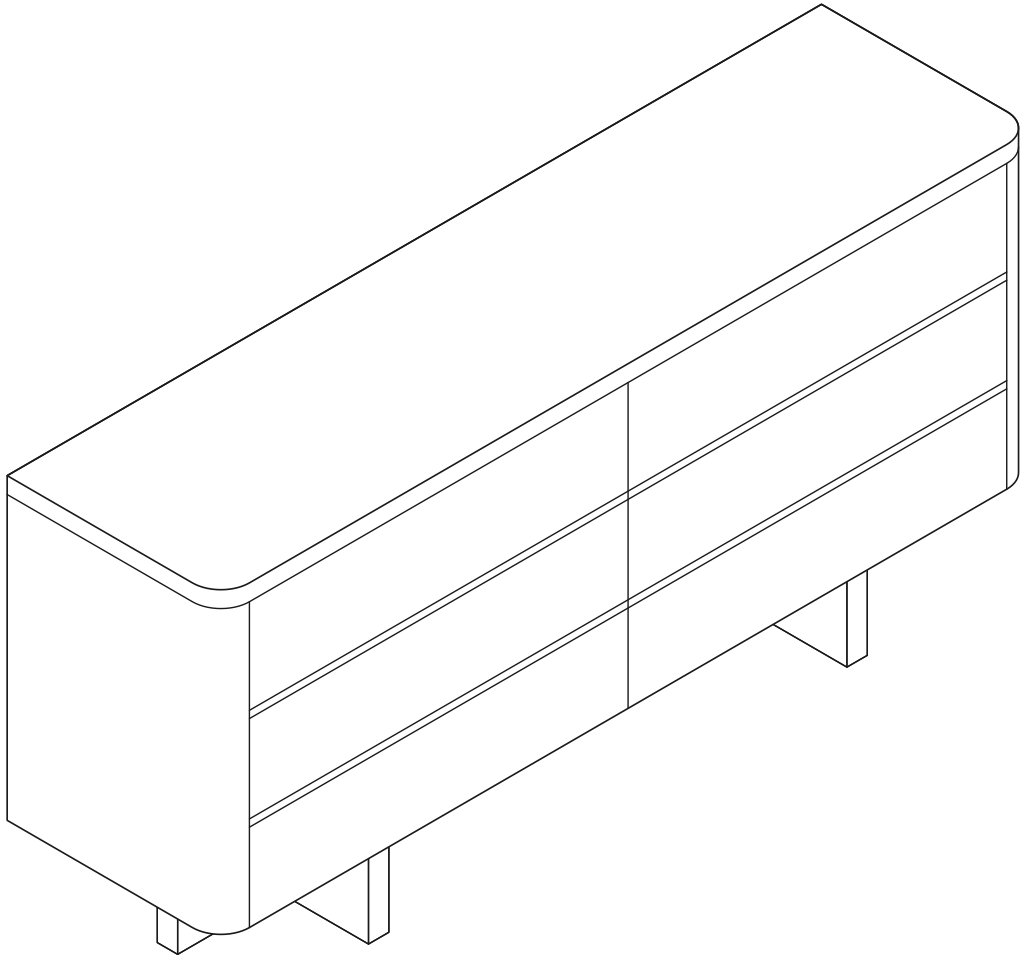


ASSEMBLY GUIDE

WE RECOMMEND SHARING THE ASSEMBLY
WITH A SECOND PERSON

       
CONTENTS

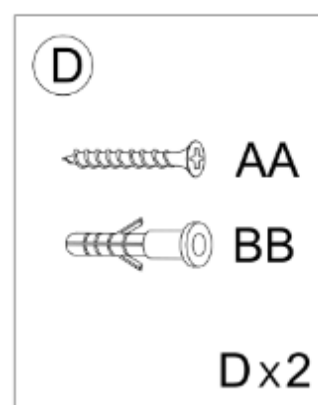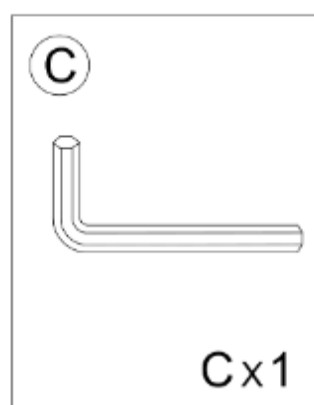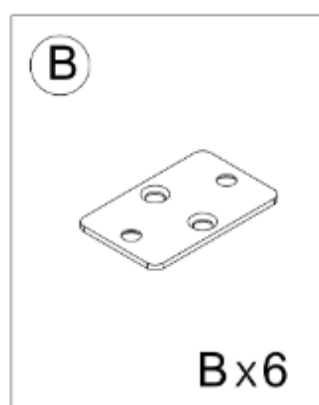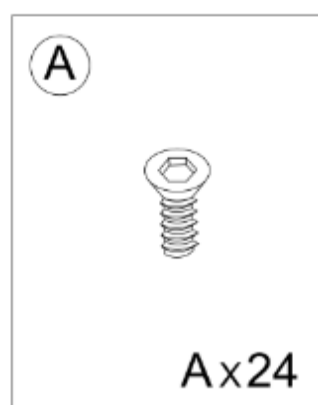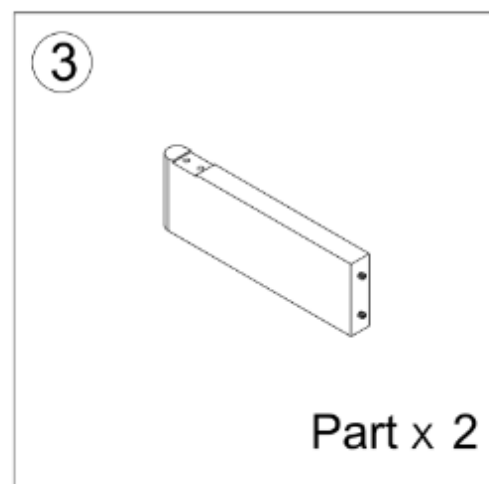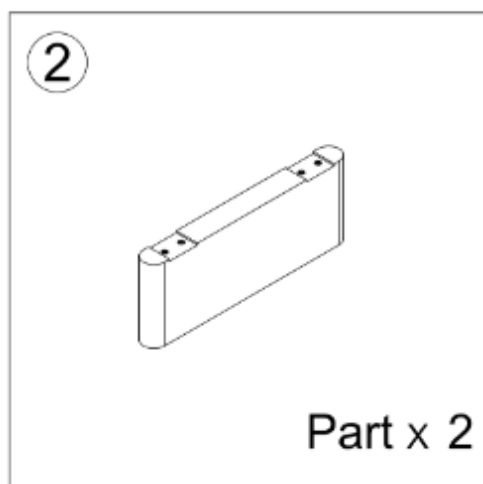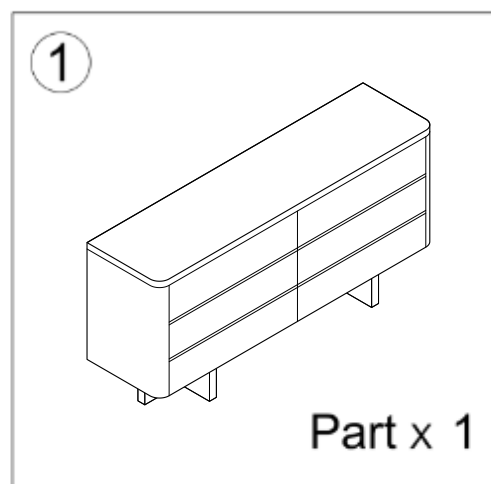

 
STEP 1

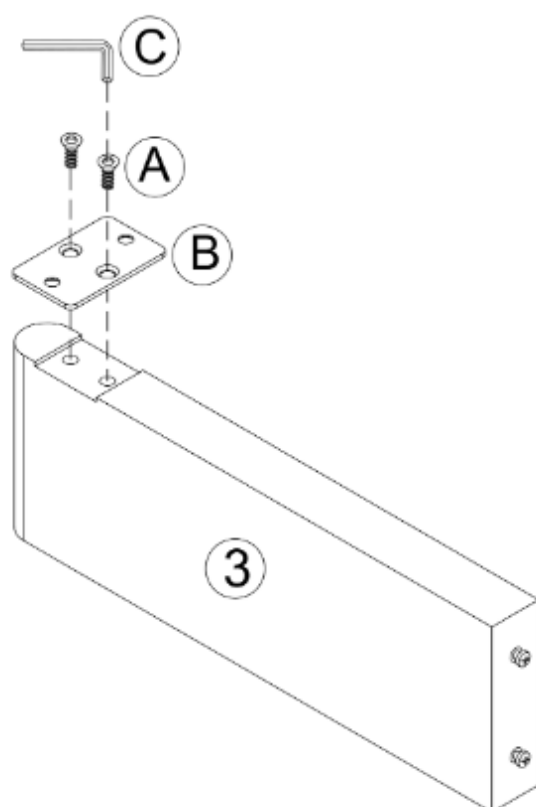

 
STEP 2

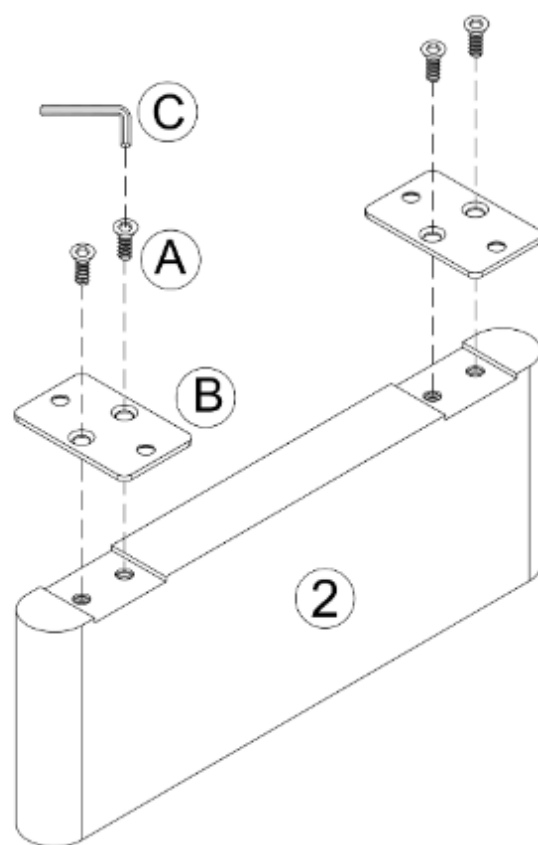

 
STEP 3

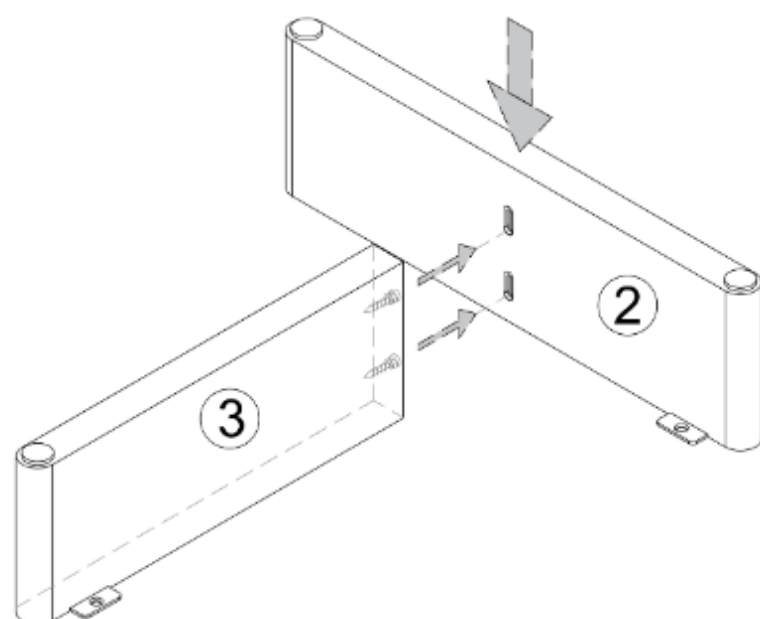

 STEP 4

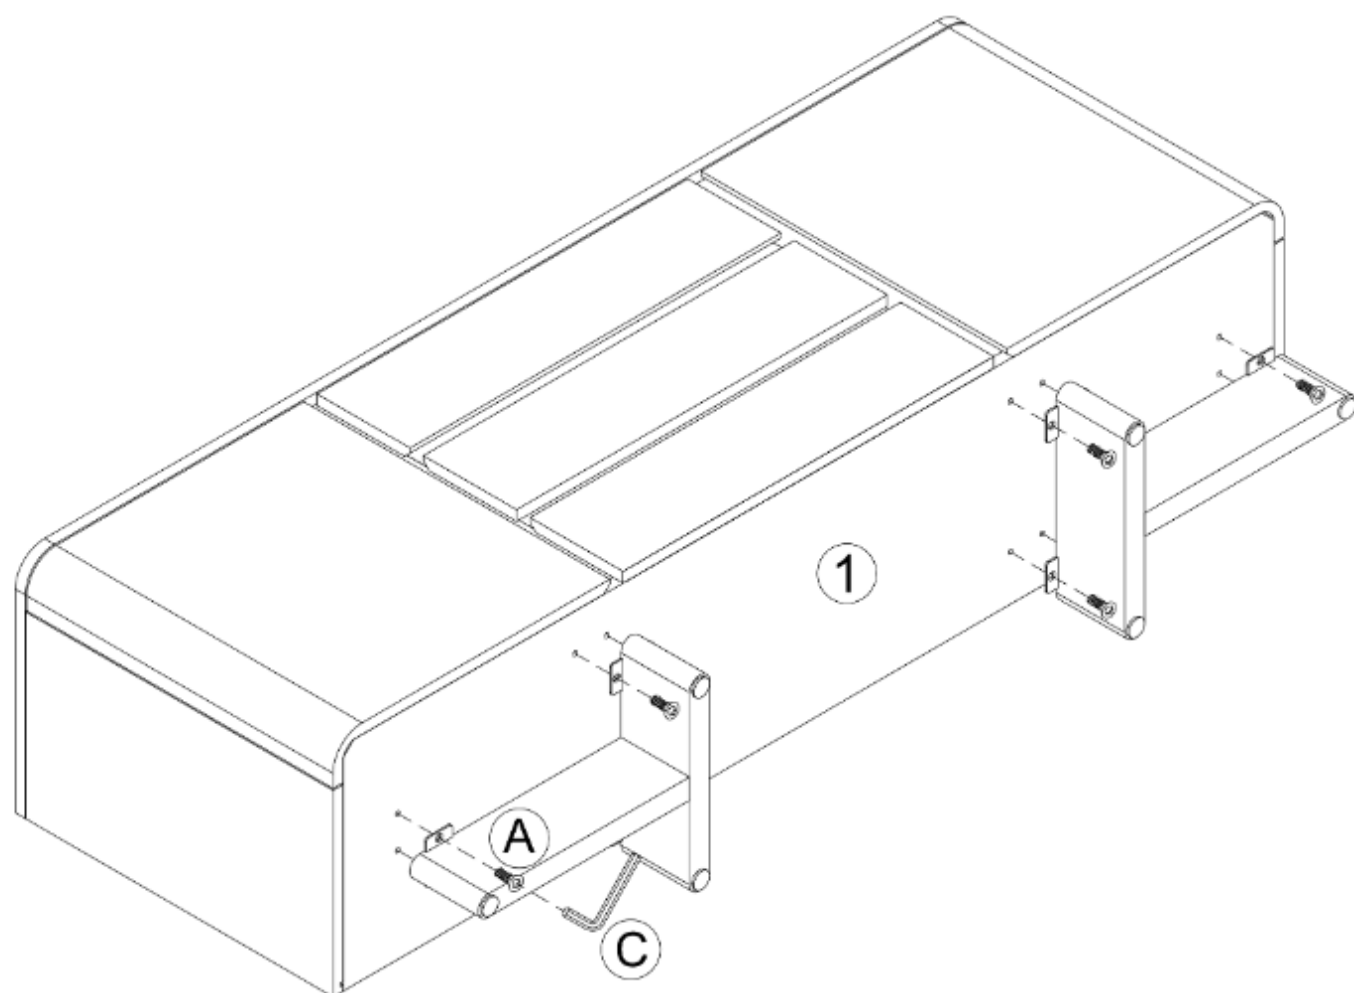

 STEP 5

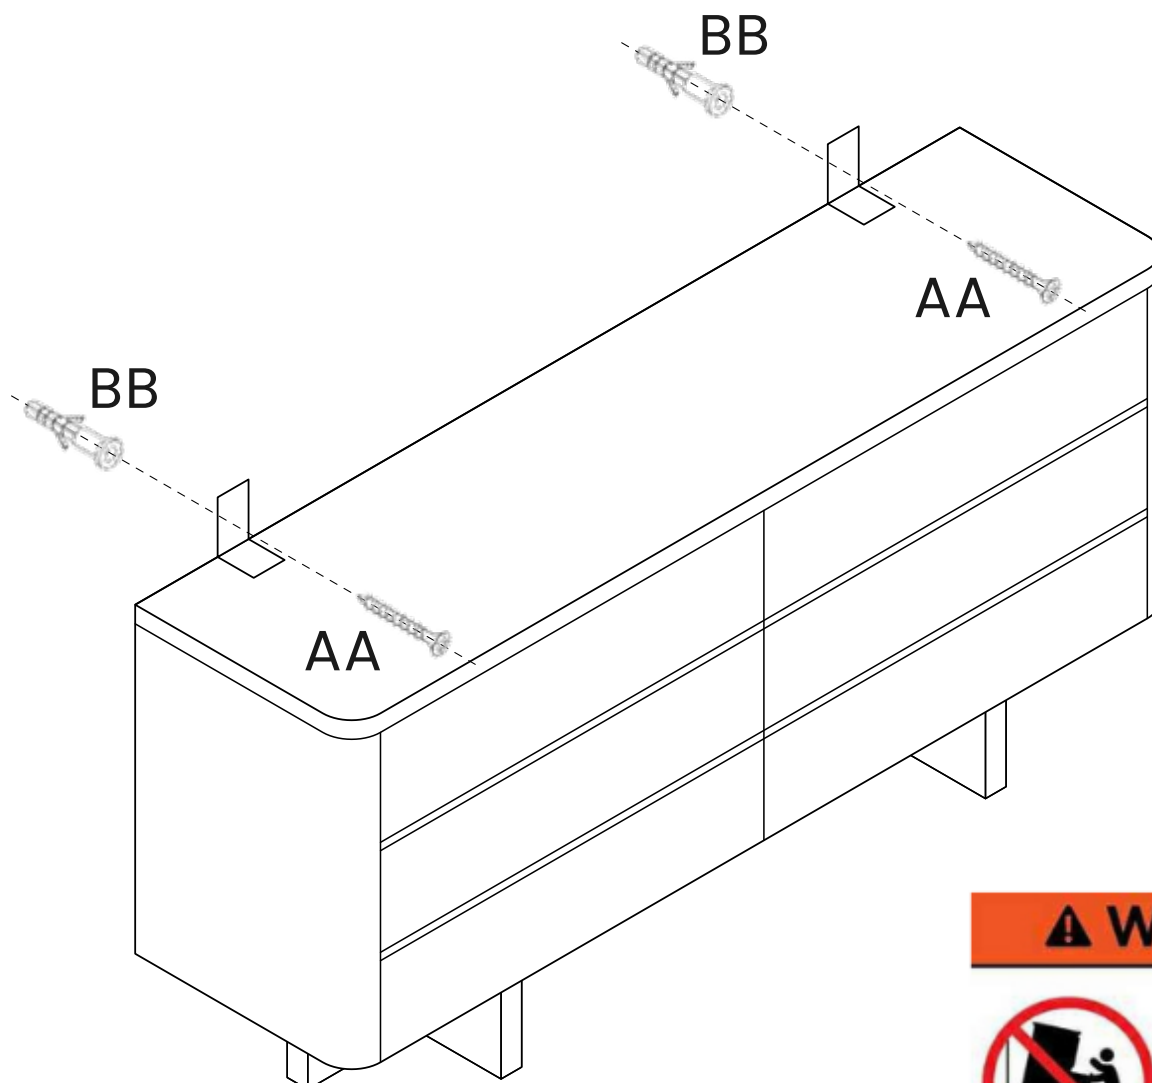

Children have died from furniture tipover.

- Always secure this furniture with an anchor device;
- Never allow children to stand, climb or hang on drawers, doors, or shelves;
- Never open more than one drawer at a time;
- Place heavy items down low;

This is a permanent label. Do not remove!

NOTE: PREVENT TOPPLING BY FASTENING YOUR DRESSER TO THE WALL.
ALTERNATE WALL ANCHORS MAY BE NEEDED DEPENDING ON
THE WALL TYPE.

CARE TIPS

Note – use non-abrasive furniture cleaners to ensure your table receives the best care.

Always read the label of cleaning products to ensure suitability before using.

Spills should be soaked up immediately with a clean, absorbent soft cloth or paper towel.

Mild cleaning products can be safely applied to the metal's surface. Just be sure to wipe the solution with a clean, soft cloth.

Avoid putting acidic material, such as lemon juice, onto your tabletop.

Keep product out of direct sunlight. The timber veneer or wood will lighten and surface finishes may degrade if exposed to bright sunlight.

Wipe timber veneer or wood with a damp cloth. Avoid THE use of household chemicals and cleaners.

Spills must be soaked up immediately with a clean absorbent cloth or paper towel.

We recommend the use of coasters and placemats to prevent damage.



SCAN FOR MORE PRODUCT INFO