

OSCAR
CABINET
OAK AND
FLUTED GLASS

ASSEMBLY
GUIDE

WE RECOMMEND SHARING THE ASSEMBLY
WITH A SECOND PERSON

CONTENTS

NOTE:

First you must check the quantity of hardware and product parts are correct with the list below .
Prepare necessary tools After that follow the instructions step by step


REQUIRED TOOLS:

Phillips Head Screwdriver

3/16 "Drill Bit, Electric Drill (for Masonry Installation only)

List hardware

Bulong LGC M6 * 70



A x 2

Bulong LGC M6 * 20



B x 12

Washer Ø6 /Ø 13 * 1



C x 16

Spring Washer Ø 6 * 1



D x 16

Bulong LGC M6 * 35



E x 4

Wall Anchor M6 * 30



F x 4

Screw M3.5 *15



G x 4

Strap Tie 8 * 300



H x 2

Anti-Tip Pastic Pad




K x 4

Screw M4* 30




M x 4

Allen Key M4 * 22 * 60




E x 1


List part

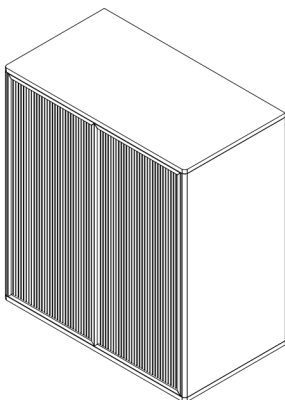

Base (x 1)

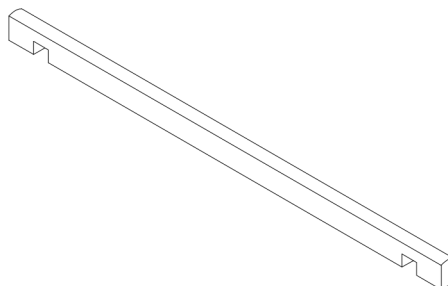


Under rail (x1)

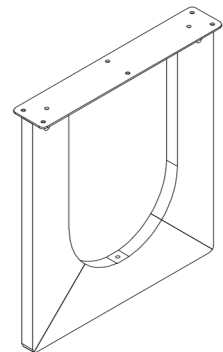


Leg (x 2)

STEP 1

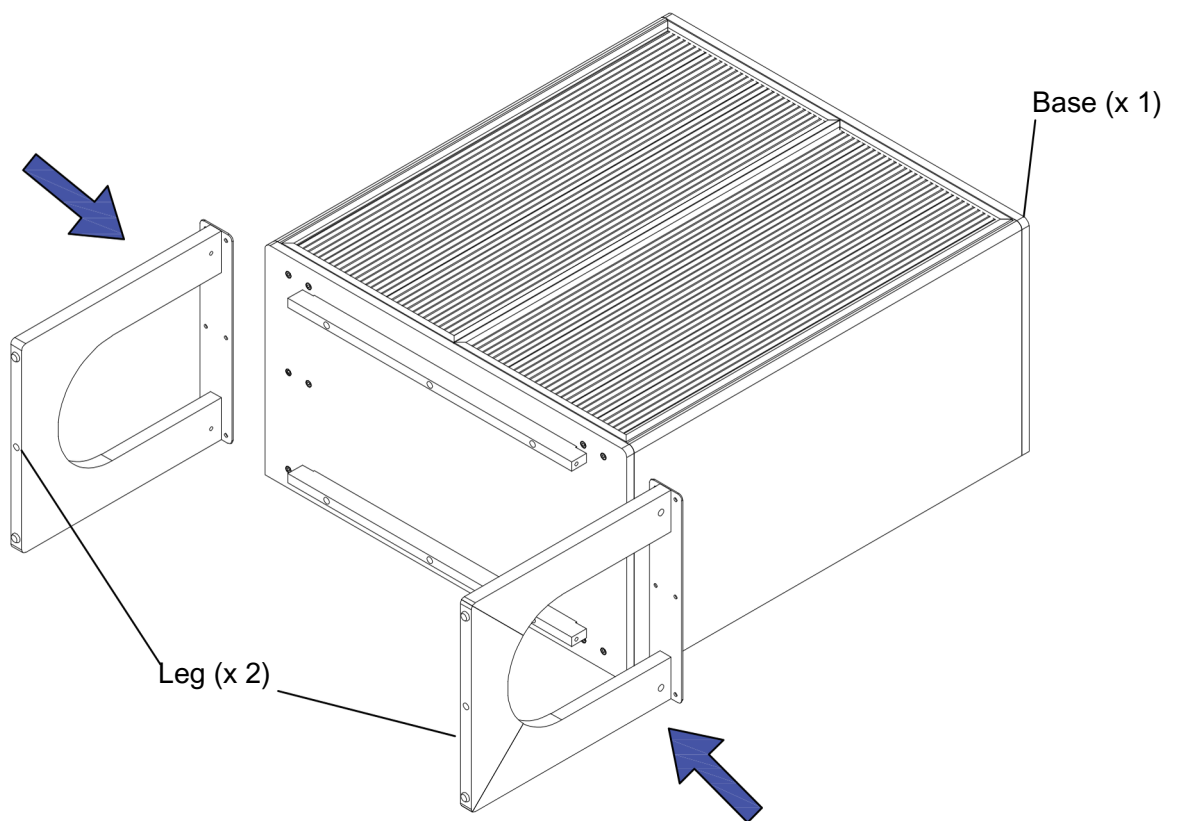


STEP 2

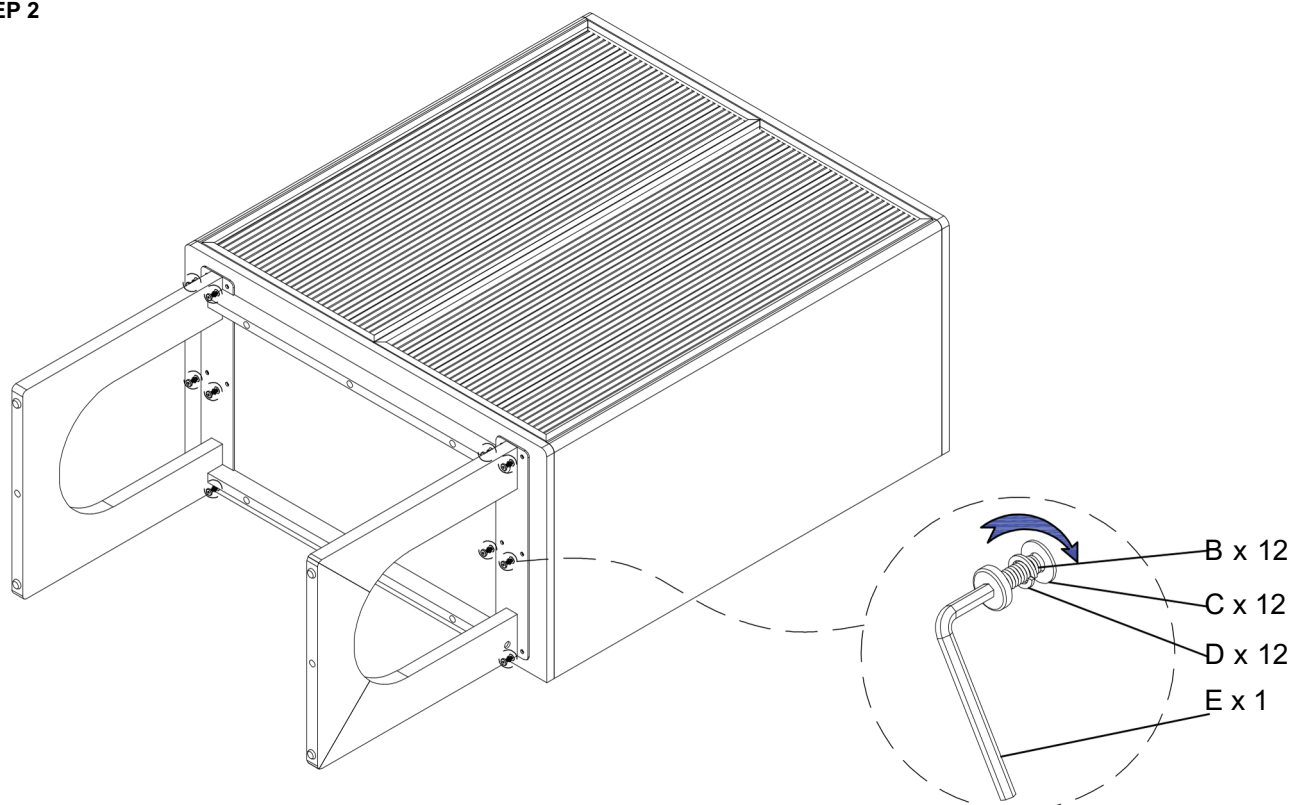


NOTE: ALWAYS USE A CLEAN AND PROTECTIVE SURFACE TO PREVENT DAMAGING THE TABLE TOP.

ONLY TIGHTEN SCREWS 50% UNTIL ALL SCREWS ARE IN PLACE

STEP 3

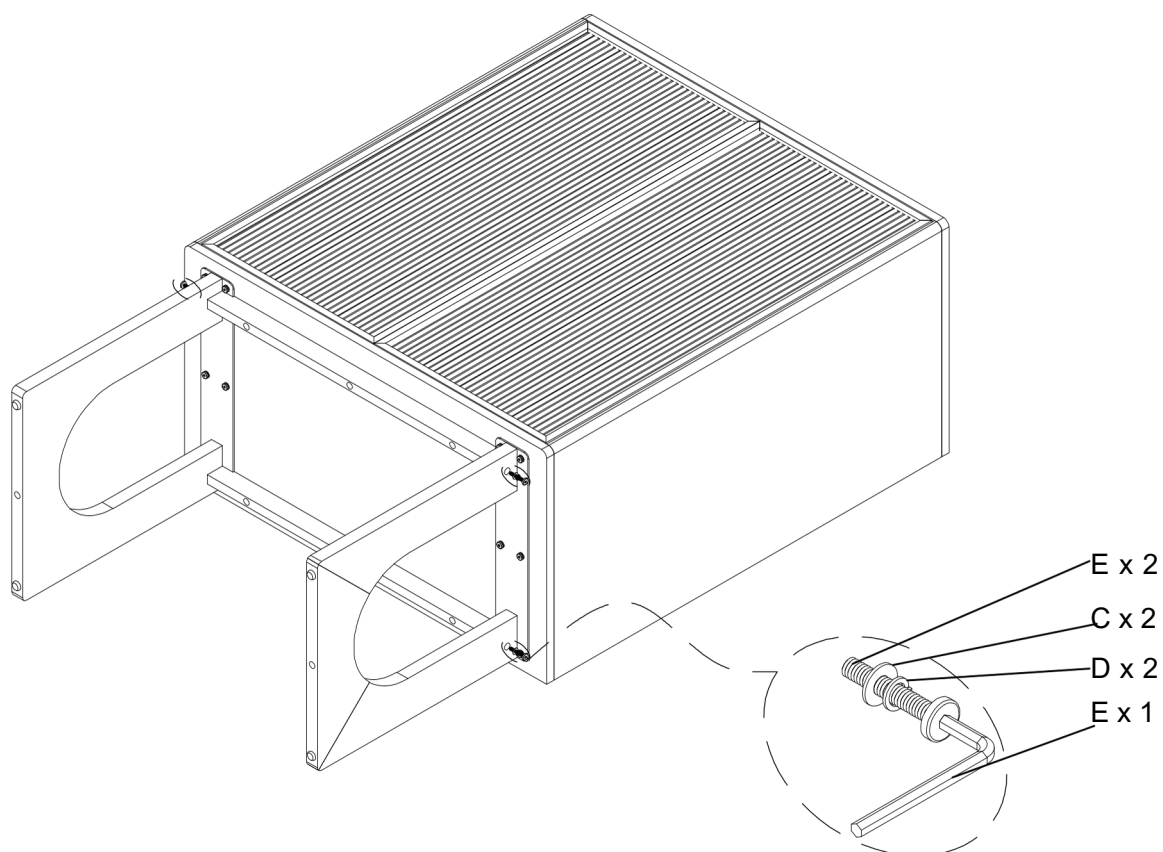


STEP 4

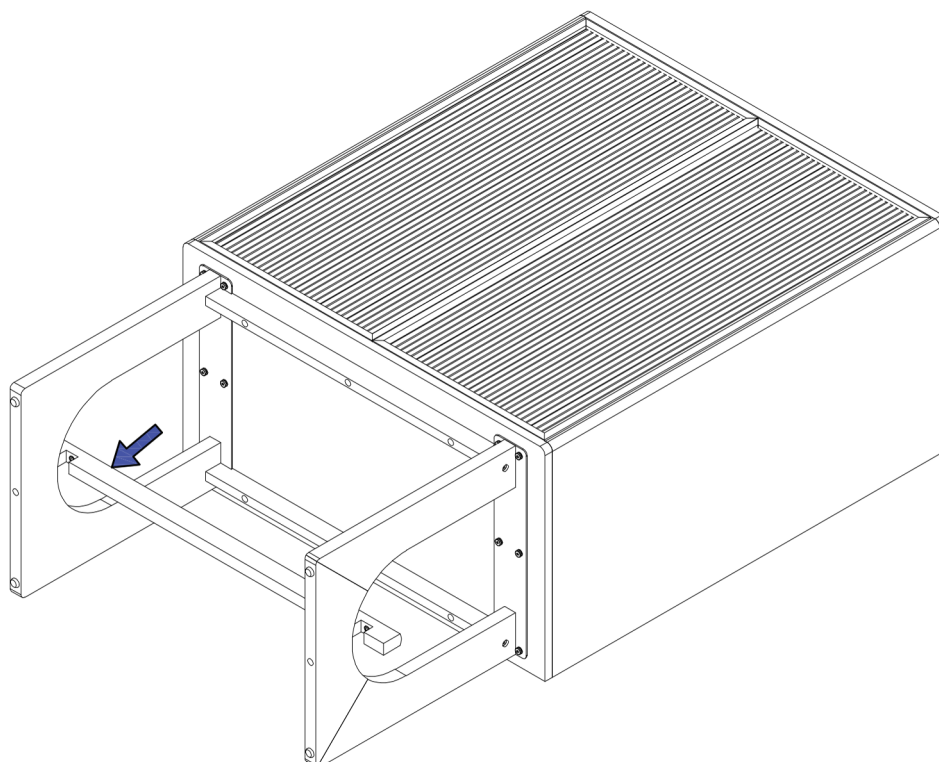

NOTE: ALWAYS USE A CLEAN AND PROTECTIVE SURFACE TO PREVENT DAMAGING THE TABLE TOP.

ONLY TIGHTEN SCREWS 50% UNTIL ALL SCREWS ARE IN PLACE

STEP 5


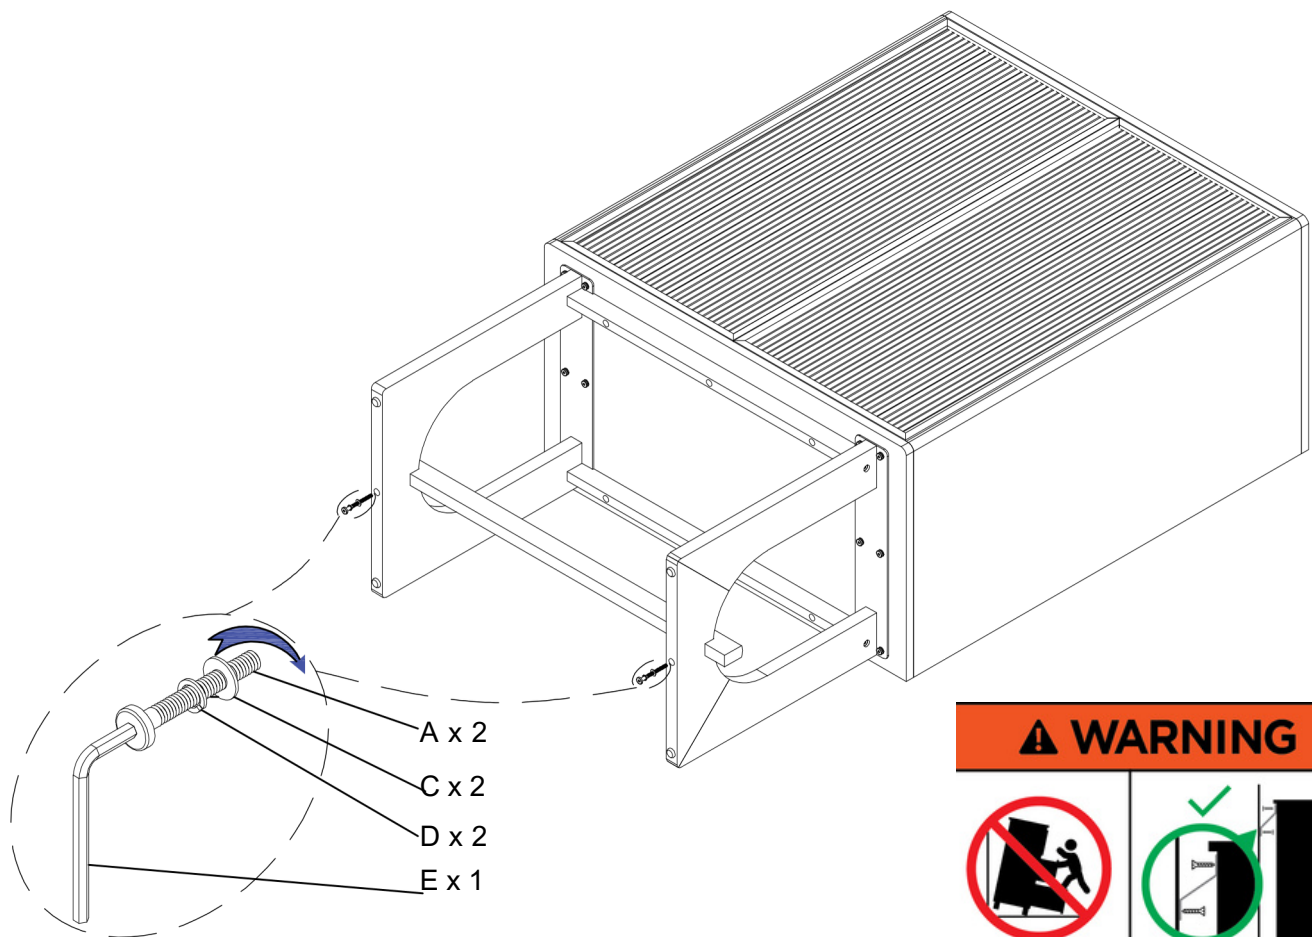


Children have died from furniture tipover.

- Secure this furniture with an anchor device;
- Never allow children to stand, climb or hang on drawers, doors, or shelves;
- Always secure your television with an anchor device;

This is a permanent label. Do not remove!

STEP 6

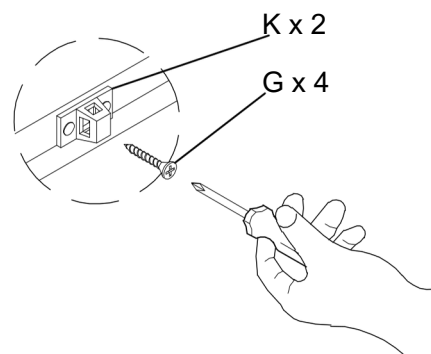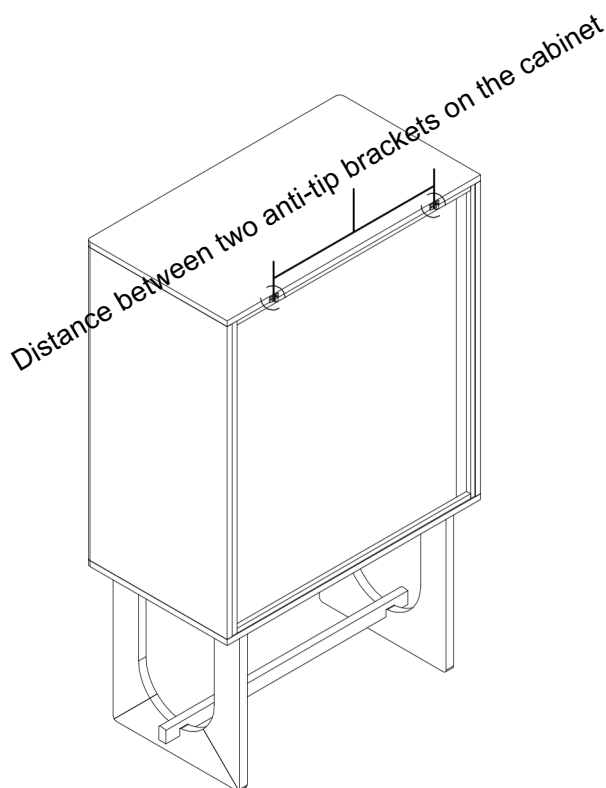


NOTE: ALWAYS USE A CLEAN AND PROTECTIVE SURFACE TO PREVENT DAMAGING THE TABLE TOP.


ONLY TIGHTEN SCREWS 50% UNTIL ALL SCREWS ARE IN PLACE

STEP 5

Distance between two anti-tip brackets on the cabinet = Distance between two anti-tip brackets on the wall

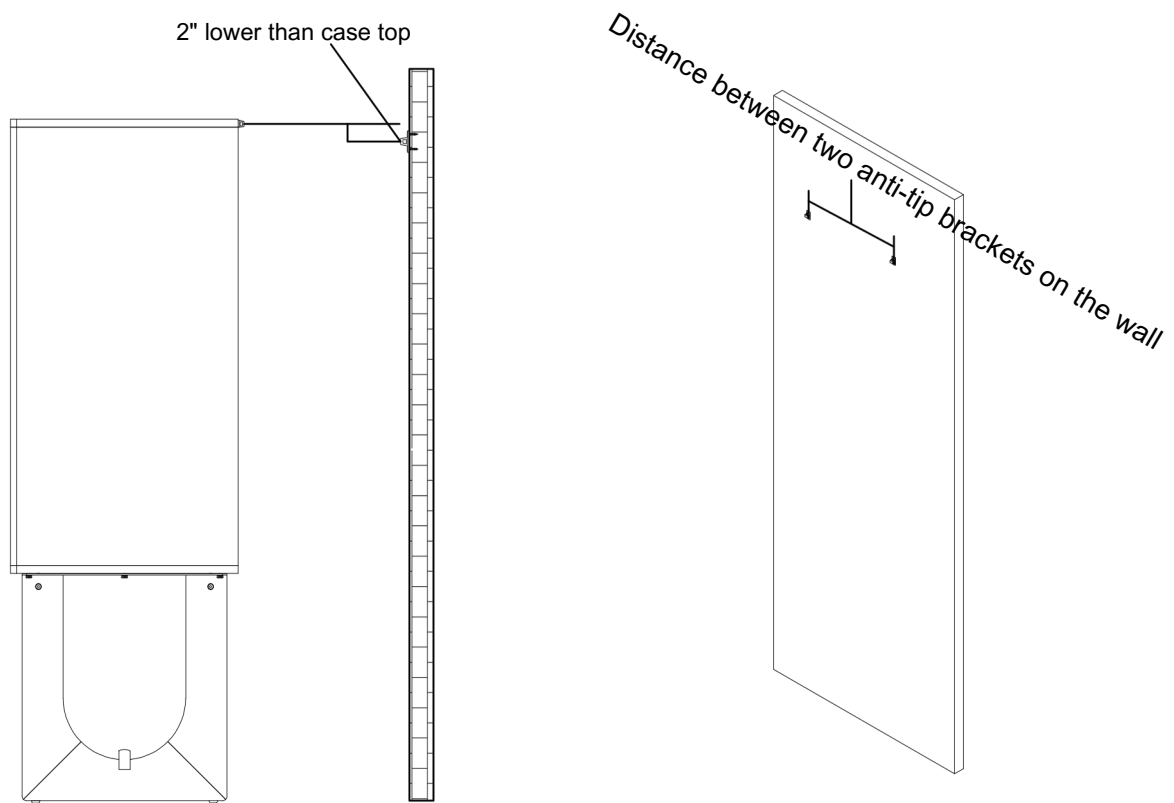


STEP 6

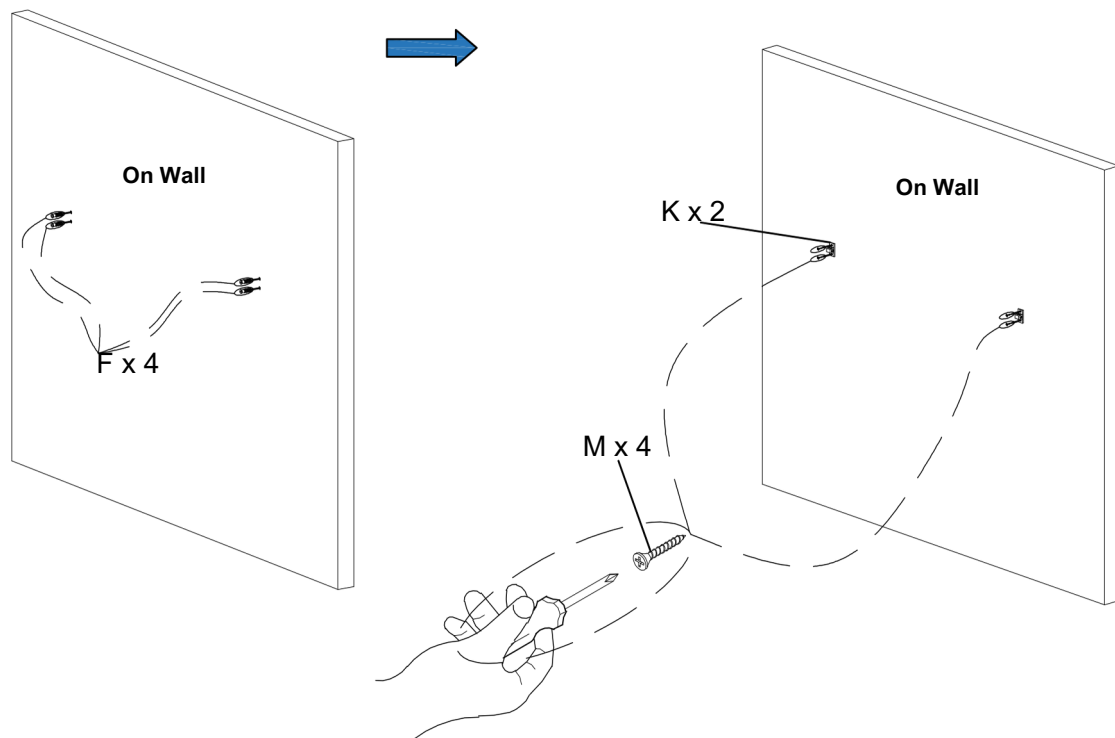


NOTE: ALWAYS USE A CLEAN AND PROTECTIVE SURFACE TO PREVENT DAMAGING THE TABLE TOP.

ONLY TIGHTEN SCREWS 50% UNTIL ALL SCREWS ARE IN PLACE

STEP 7

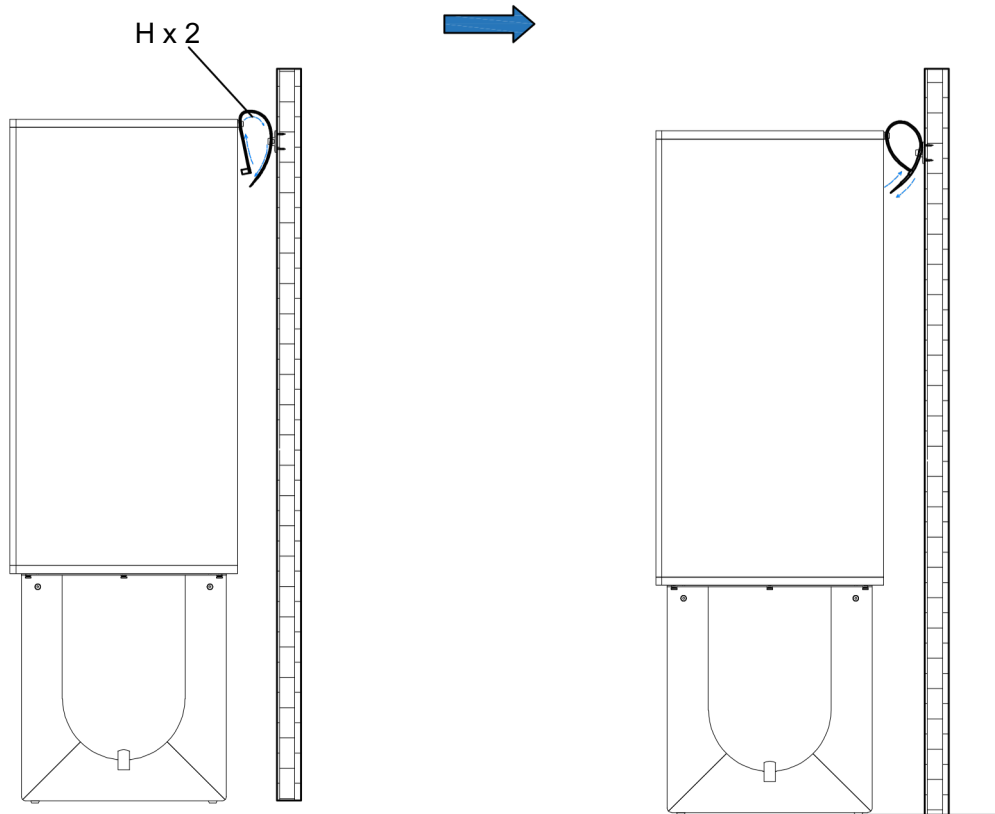

FINISH

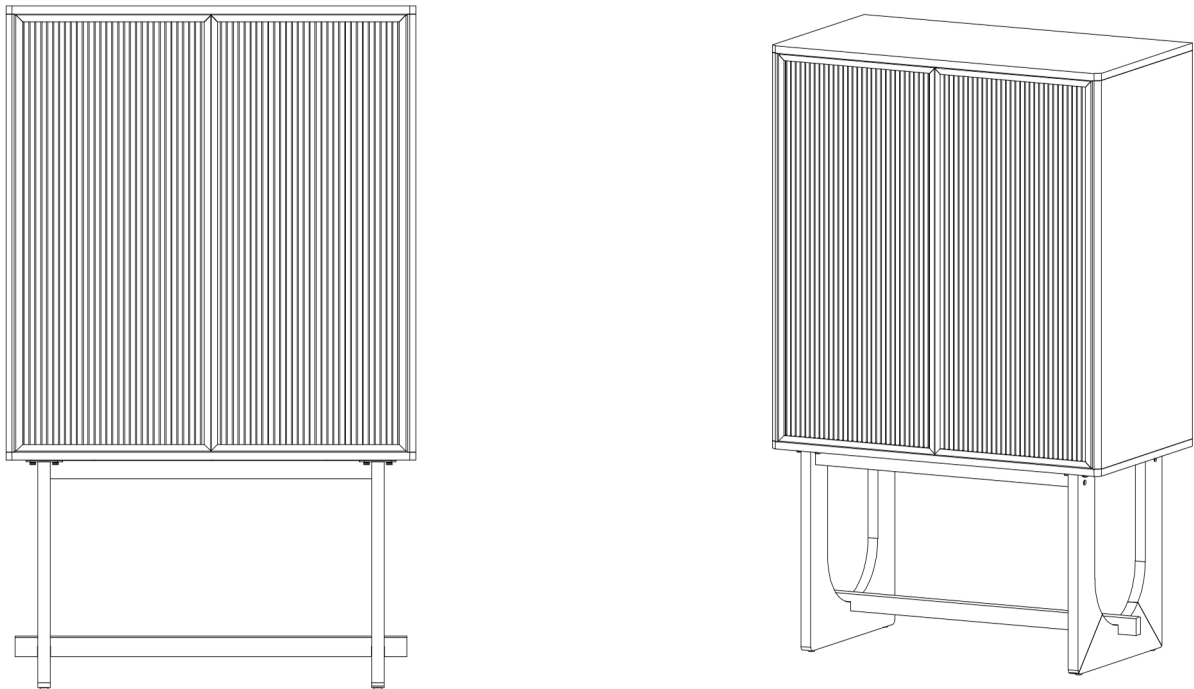

NOTE: ALWAYS USE A CLEAN AND PROTECTIVE SURFACE TO PREVENT DAMAGING THE TABLE TOP.

ONLY TIGHTEN SCREWS 50% UNTIL ALL SCREWS ARE IN PLACE

CARE TIPS

Note – use non-abrasive cleaners to ensure your furniture receives the best care.

Always read the label of cleaning products to ensure suitability before using.

Spills should be soaked up immediately with a clean, absorbent soft cloth or paper towel.

Mild cleaning products can be safely applied to the surface. Just be sure to wipe the solution with a clean, soft cloth.

Avoid putting acidic material, such as lemon juice, onto your furniture surface.

Keep product out of direct sunlight. The finish may lighten or degrade if exposed to harsh sunlight.

Wipe surface with a damp cloth. Avoid THE use of household chemicals and cleaners.

Spills must be soaked up immediately with a clean absorbent cloth or paper towel.



SCAN FOR MORE PRODUCT CARE INFO